


AIS Class B Device Firmware Upgrade Guide

Step 1:

- 1) Disconnect the USB connection between the AIS Class B and the PC.
- 2) Execute the AIS firmware upgrade application (*.exe) on a Windows PC, Run as administrator.

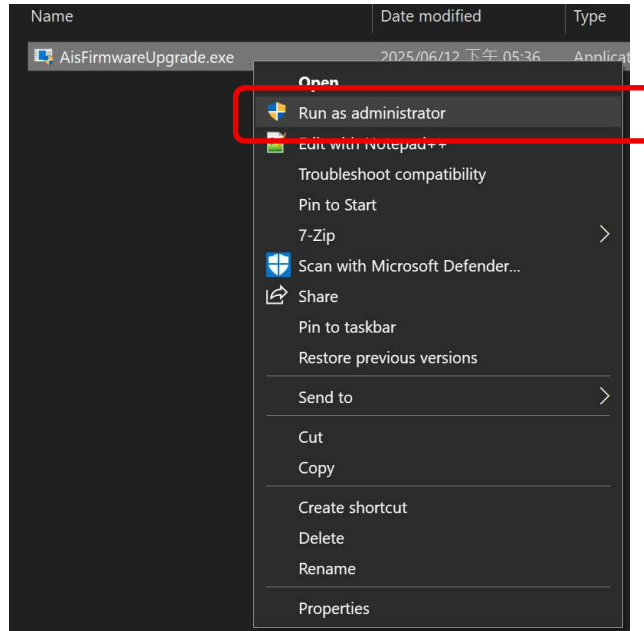


- 3) Click the “OK” button.




Step 2:

- 1) Connect the AIS Class B device to the PC via USB.
- 2) Power on the AIS Class B device either via USB or via 12V DC power supply.
- 3) The upgrade utility will start searching for the AIS Class B device when clicking the “**Start**”.

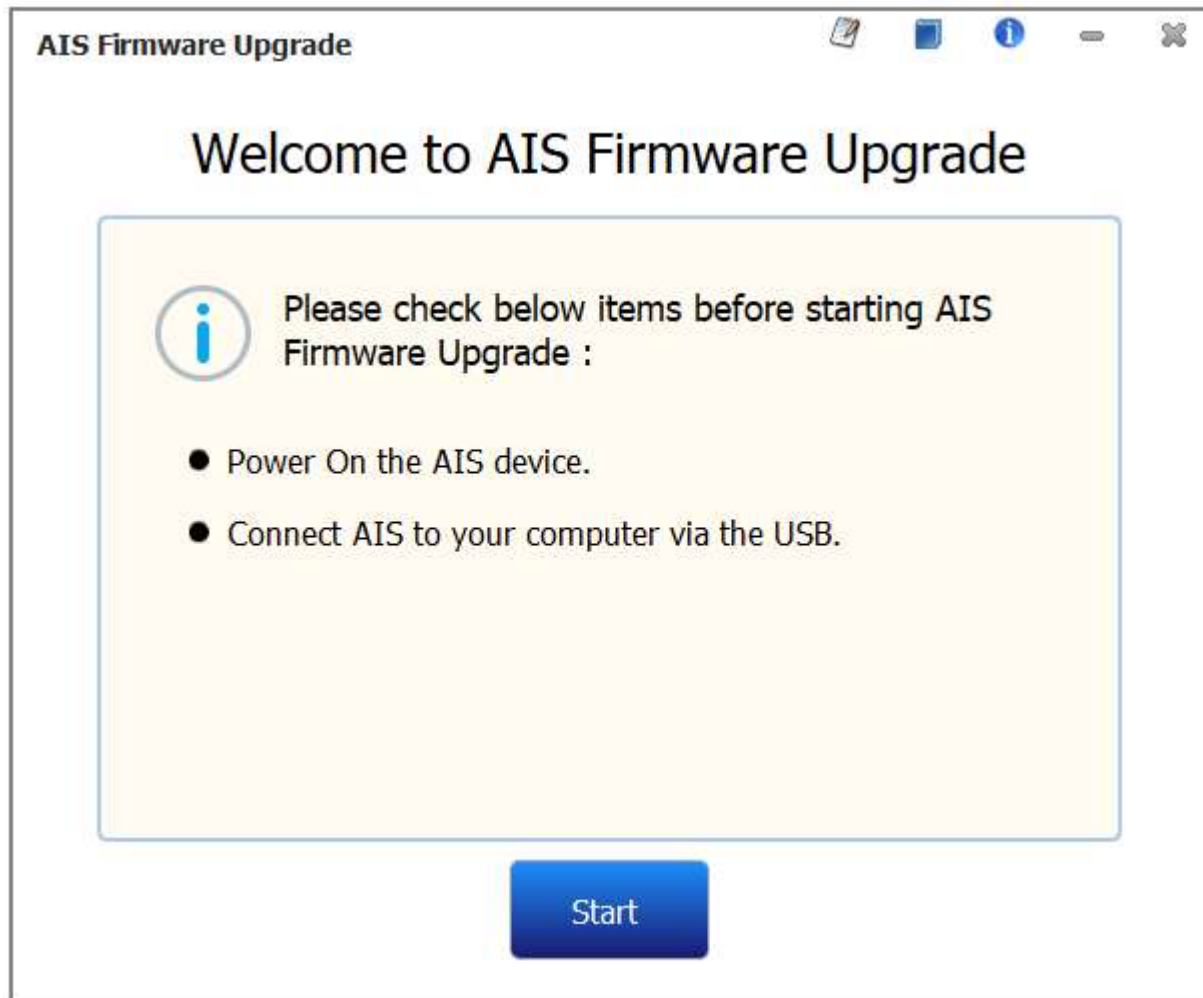


Step 3:

- 1) If the firmware upgrade utility could not find the AIS Class B device, it will show following popup message. Please check Step 3 again in such situation.
- 2) If the upgrade utility found the AIS Class B device, this popup message would not show up.

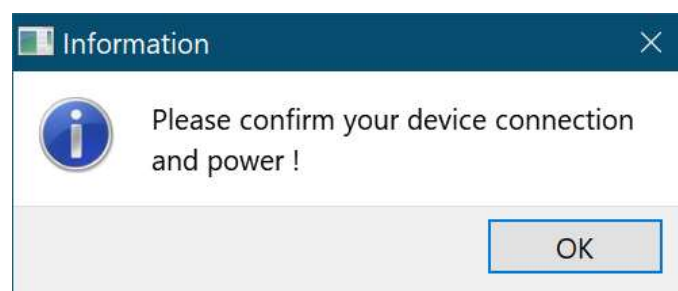


Step 4:

- 1) The firmware upgrade utility will show **Current firmware version** of the device and the **New Firmware Version** to be upgraded.
- 2) Click "**Next**" to start the firmware upgrade process.
- 3) Click "**Back**" to go back to Step 2.

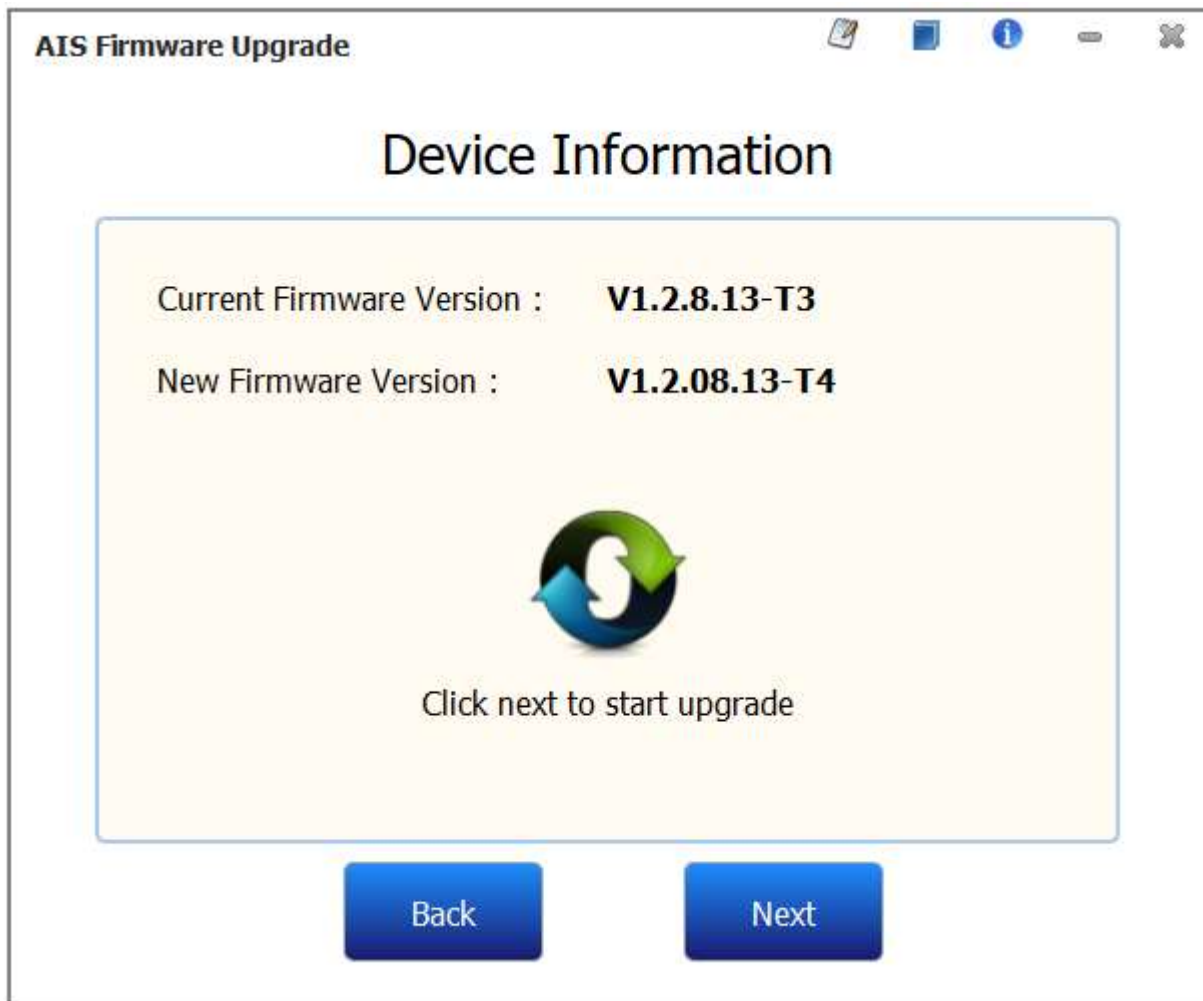

Step 5:

- 1) Upgrade in progress after clicking “**Next**” in Step 4.
- 2) Do not power off the AIS Class B device or unplug the USB connection during this time period.

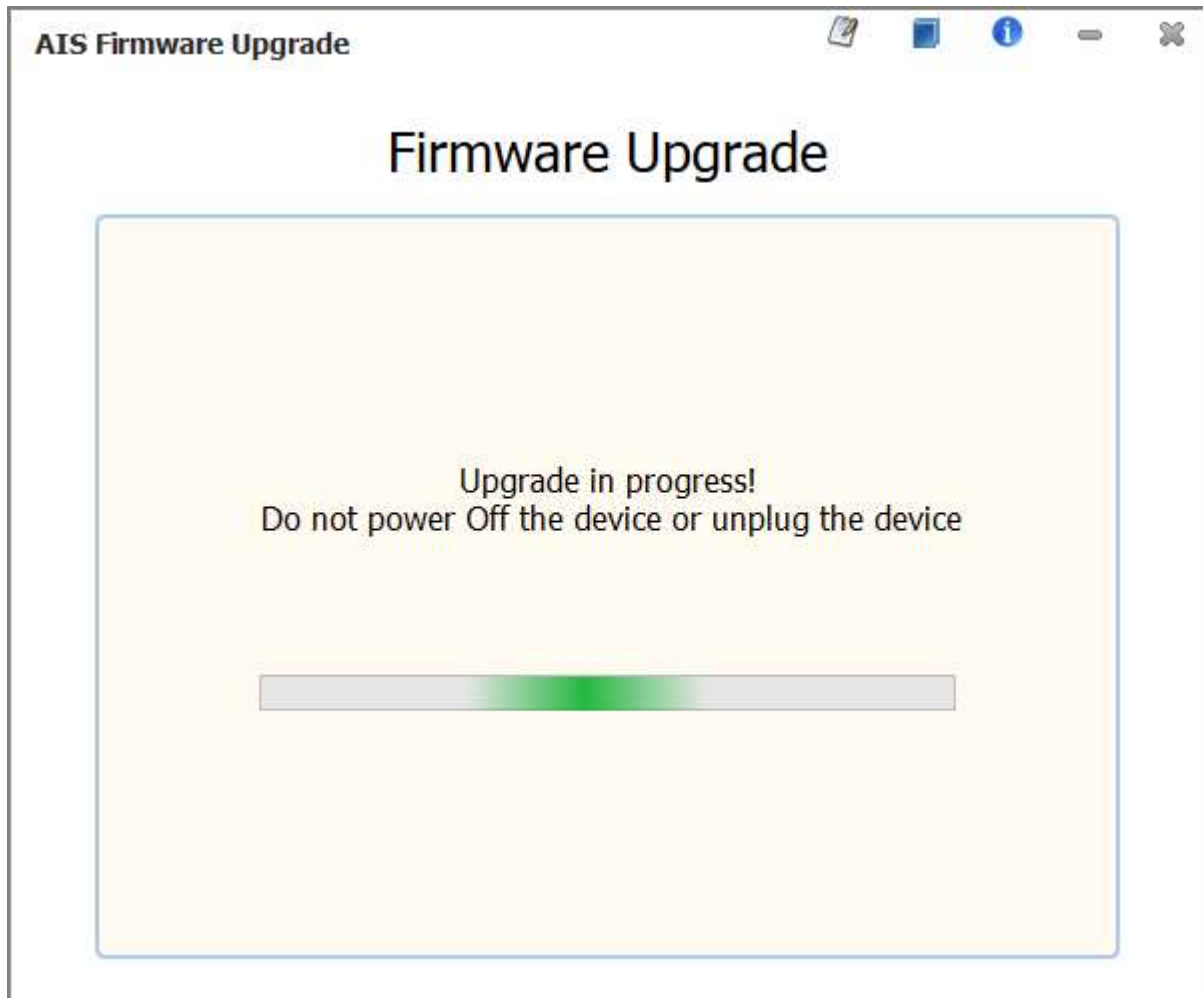

Step 6:

- 1) The firmware upgrade completed successfully.
- 2) Click "**Finish**" to conclude the firmware upgrade procedures.
- 3) Please power off the AIS Class B device and power on again for operation.

